


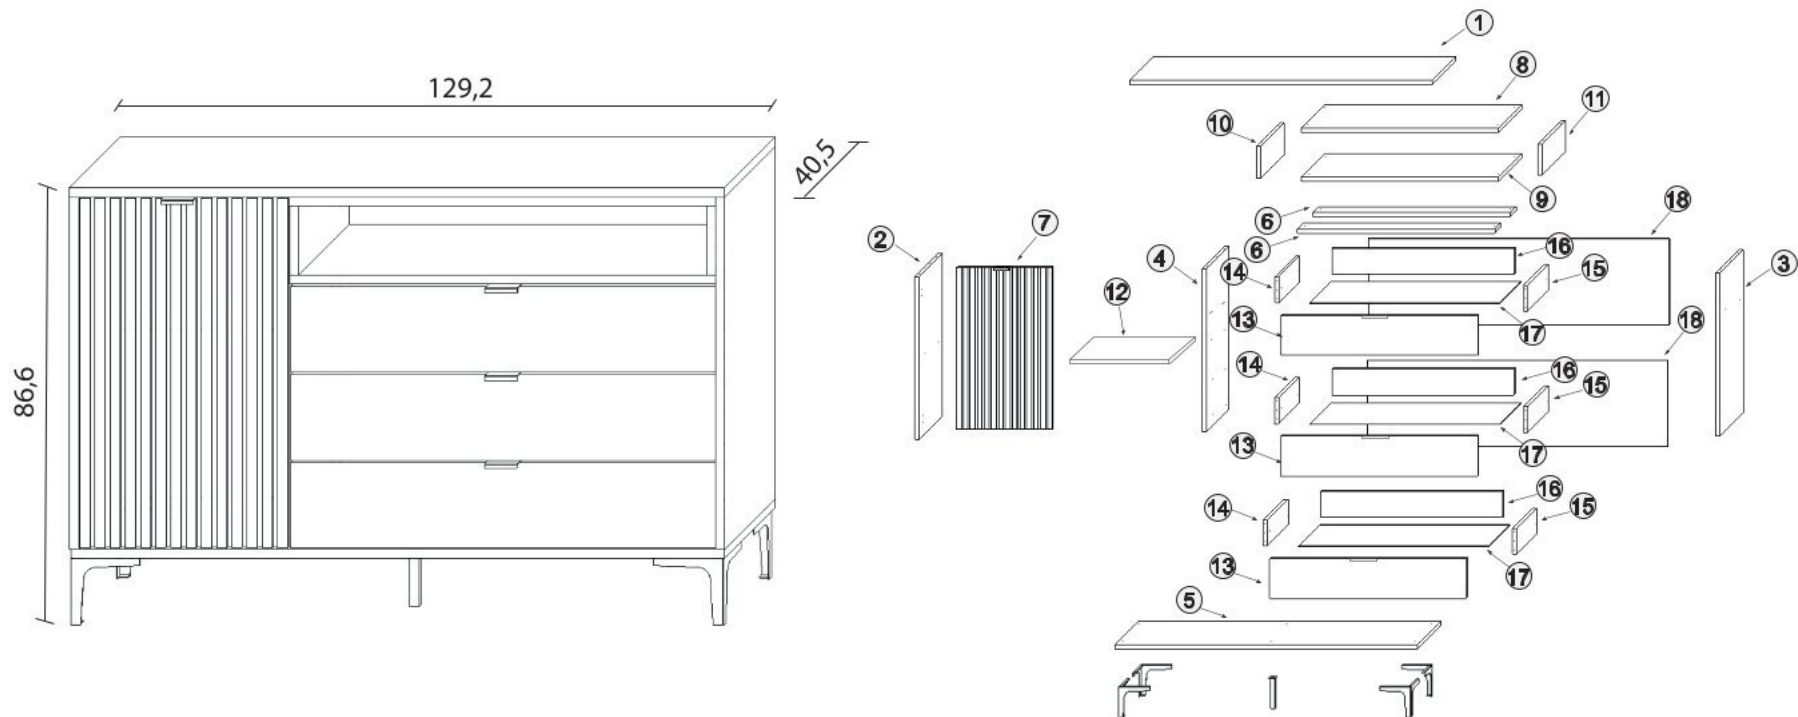


















 

Montážní návod

Komoda PIANO 1D3S

ARTEN NÁBYTEK



- | | | | | |
|--------------------|-------------------|-------------------|-------------------|--------------------|
| ① 1x 1292x402x18mm | ② 1x 695x400x18mm | ③ 1x 695x400x18mm | ④ 1x 695x380x18mm | ⑤ 1x 1289x400x18mm |
| ⑥ 2x 841x100x18mm | ⑦ 1x 690x406x18mm | ⑧ 1x 841x399x18mm | ⑨ 1x 841x399x18mm | ⑩ 1x 137x399x18mm |
| ⑪ 1x 137x399x18mm | ⑫ 1x 393x375x18mm | ⑬ 3x 170x838x18mm | ⑭ 3x 355x110x18mm | ⑮ 3x 355x110x18mm |
| ⑯ 3x 778x110x18mm | ⑰ 3x 810x362x3mm | ⑱ 2x 1284x363x3mm | | |

A  x 29	C₁  x 4	D  x 120	F₁  x 6	G  4x16 x 26	I  x 4	K₁  x 4	L₁  x 6	N  x 4	P  3x12 x 8	S  x 1
B  x 24	C₂  x 6	E  x 4	F₂  x 6	H  3,5x16 x 32	J  x 1	K₂  x 1	L₂  x 6	O  x 1	R  4x30 x 4	

